
 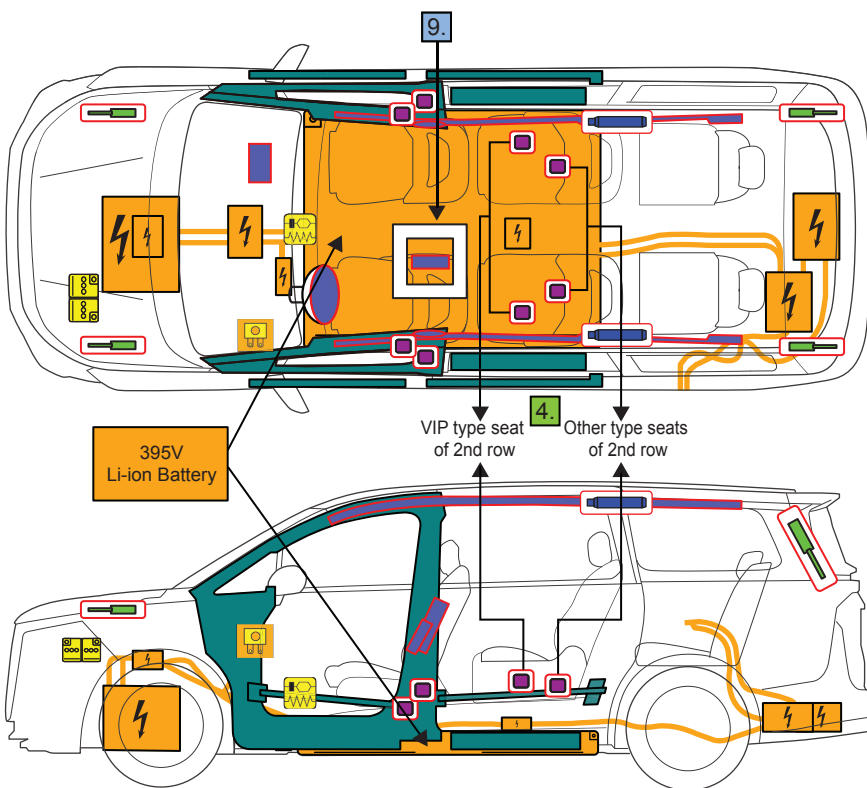


		MG M9 EV							
									
									
	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Gas strut/Preloaded spring
	High strength zone		Zone requiring special attention		Battery low voltage		High voltage battery pack		High voltage power cable/component
	Fuse box disabling high voltage system		High voltage component						
								Page	
								1 of 4	

1. Identification / recognition



2. Immobilisation / stabilisation / lifting

A - Immobilisation / stabilisation

2

1

PUSH 1x

1

Secure the vehicle using P gear and parking brake
Just press the button once, P gear and parking brake work at the same time.

2

Click the "power off" button on the screen.

B - Lifting

Suitable lifting points High-voltage battery

3. Disable direct hazards / safety regulations

Turn off - main method for disable direct hazards

1

2

3

4

Just press the button once, The vehicle will be in P.

Click the "power off "button on the screen.

Disconnect 12 Volt battery

Emergency shutdown - alternative method for disable direct hazards

1

2

Press the Hazard warning lamp switch 5 times in 3 seconds

Disconnect 12 Volt battery

Deactivating the high-voltage system – alternative method for deactivation in the vehicle interior

1

2

3


Open and remove the driver-side compartment

Pull out the F27 fuse as shown

Disconnect 12 Volt battery

3. Disable direct hazards / safety regulations

■ Disconnect from the charging station (emergency release)

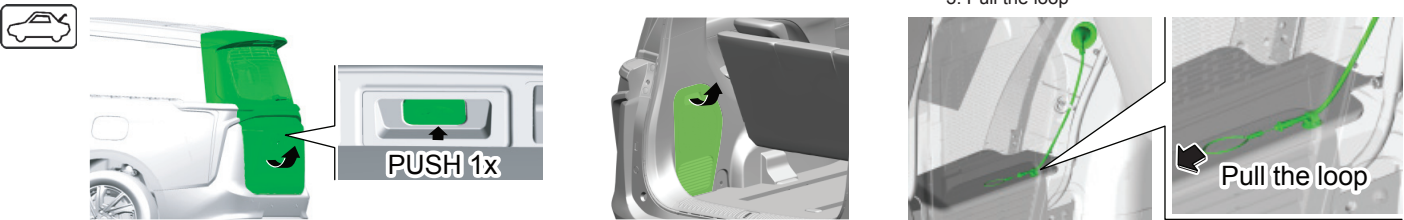

■ Access to 12V Battery



Safety regulations:

Always assume the vehicle is powered, even if it is silent!
 Make sure that the vehicle is immobilized and the propulsion system is deactivated;
 Never touch, cut, or open any orange high voltage power cable or high voltage component;
 In case of a collision with airbag deployment and/or seat belt pretensioner activation, the propulsion system will be disabled. The restraint systems are still active.

4.Access to the occupants

A Laminated glass
B Tempered glass

High strength body areas

Seat adjustment

1st row

Manual Electric

2nd row

VIP

3th row

Steering column adjustment

5. Stored energy / liquids / gases / solids

	395V
	12V
	R-1234yf 1000g

If coolant escapes from the battery cooling system, there is a risk of a thermal reaction , in the high-voltage battery. Monitor the temperature of the high-voltage battery!

IR

4 of 4